



Advancing the science of washing

SENORITA DX

The user manual

USE ONLY GENUINE IFB SPARES & ACCESSORIES

** Company shall not be responsible for defects arising due to usage of spurious parts and accessories*

W E L C O M E

Dear Customer,

Congratulations for buying India's No. 1 fully automatic washing machine!

We welcome you to the proud IFB owner's club.

Your machine, you will see, is as efficient as washing machines can be. It uses less amount of water, detergent, electricity and yet, gives a better wash than any other machine. What makes this possible is pure German logic.

Your machine, with its unique features such as tumble wash, shower system and cool down cycle, is fully automatic, meaning you only have to spend few minutes with it, after which, it takes over.

As you read this manual you'll understand what this washing machine can do for you.

For any further information, please contact your nearest dealer or IFB service centre. We'll be happy to give you all the help you require.

That said, now we'll let the machine take over. Happy washing, and congratulations once again.


Yours sincerely,

Chief Executive

CONTENTS

KNOW YOUR MACHINE.....	6
INSTALLATION.....	7
☞ Pre Installation	
☞ Unpacking	
☞ Setting up	
☞ Water inlet	
☞ Water outlet	
☞ Electrical connection	
USING YOUR MACHINE.....	9
☞ Control panel	
☞ Enviromental protection / conservation issues	
☞ Before using your machine for the first time	
☞ Program selector	
☞ Optional buttons	
☞ Child lock safety provision	
☞ Automatic detergent dispenser tray	
☞ Kinds of wash programs & Options available	
☞ Exclusive programs	
☞ Exclusive in -built features	
☞ Programme chart	
OPERATION.....	16
☞ Sorting of garments	
☞ Loading the machine	
☞ Detergent to be used & quantity	
☞ Fabric conditioner	
☞ Treatment of stains	
☞ Fabric care symbols	
☞ Cloth weights	
☞ Check points	
☞ Programming the machine	
☞ When the program has ended	
MAINTENANCE.....	20
☞ Coin Trap	
☞ Drum	
☞ Sieves	
☞ Frost protection	
☞ Draining during emergencies	
TROUBLE SHOOTING.....	22
☞ Why does it happen?	
☞ Error interpretation	
SAFETY PRECAUTIONS.....	25
TECHNICAL DATA.....	26

KNOW YOUR MACHINE

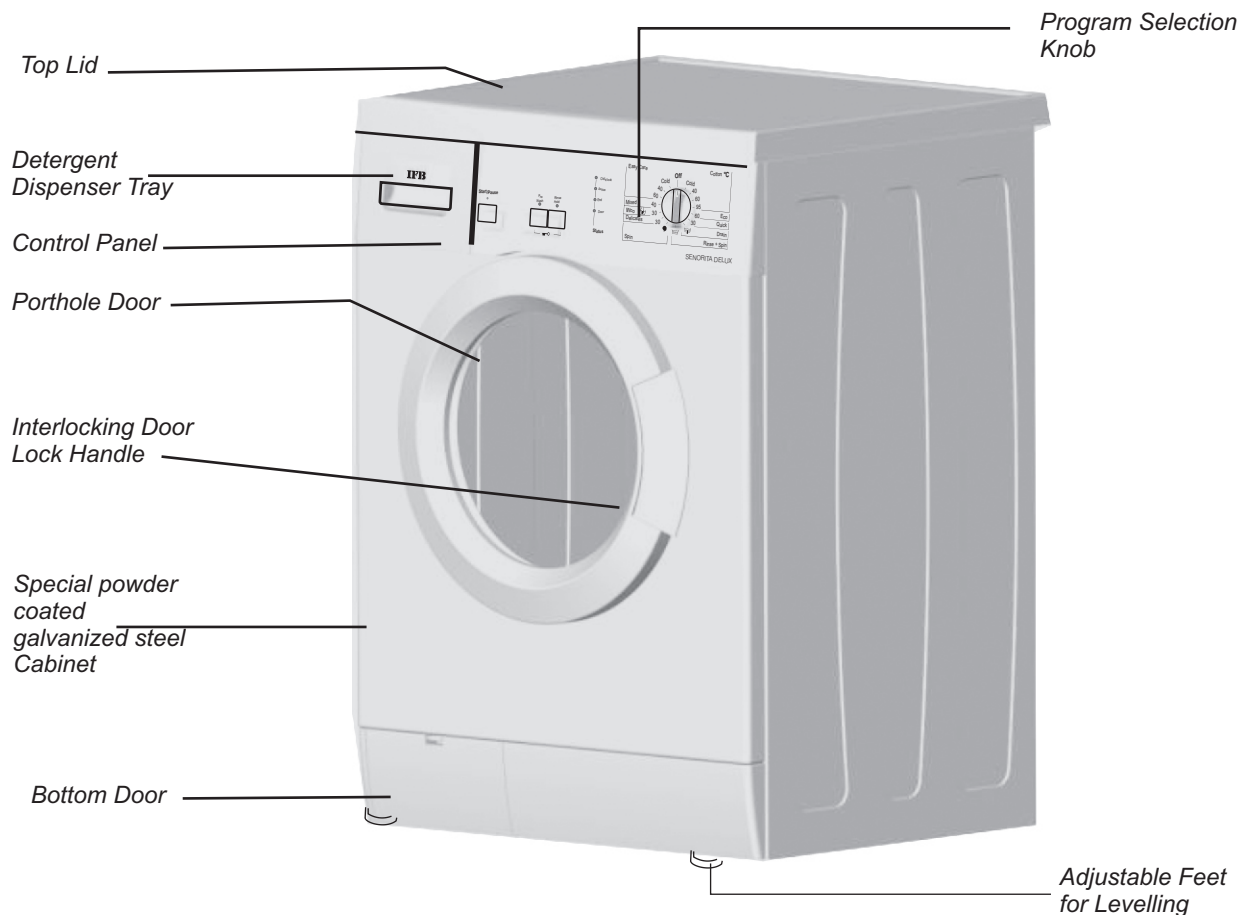


ADVANTAGES OF TUMBLE WASH

- MOST EFFECTIVE CLEANING AS THE CLOTHES PASS THROUGH SOAPY WATER AND ALSO FALL ON SOAP SOLUTION IMPROVING WETTING OF CLOTHES.
- RESEMBLES THE THUMPING AND RUBBING ACTION OF GENTLE HAND WASH.
- USES LESS WATER COMPARED TO TUB TYPE TOP LOADERS.
- LESS WATER MEANS LESS DETERGENT AND ELECTRICITY CONSUMPTION.
- WASHING IS EFFECTIVE BY DETERGENT, SOAKING, HEATING, TUMBLING AND SQUEEZING.
- GIVES BETTER DRYING EFFECT BY SPINNING.


INSTALLATION

PRE - INSTALLATION


- It is mandatory to have a 16 amp. 3-pin 230V AC, 50Hz electrical point with a 16 amp. MCB or Automatic short circuit protection device within 1 meter of the machine. Make sure it has proper earthing.
- Fixed plumbing is recommended for the machine. The water inlet of the machine has a collar with 3/4" parallel internal threads. The water supply point with an external thread 3/4" parallel thread should be available within 1 meter of the machine location. Please refer the figures (page. no. 8) under the topics WATER INLET and WATER OUTLET.
- Please contact our service centre for installation and demonstration of the machine after the mentioned points have been completed.

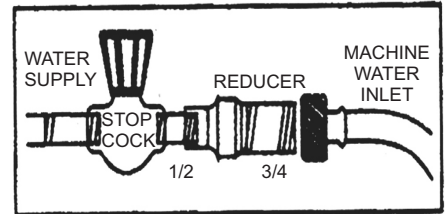

UNPACKING

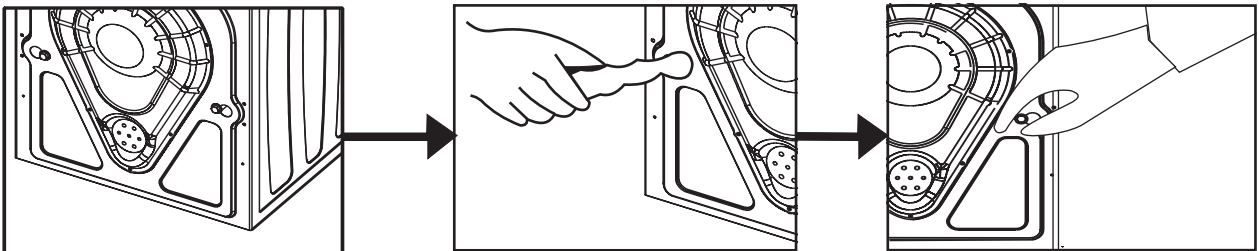


- Remove Carton.
- Remove top packing cover.
- Remove side packing and plastic jacket.
- Remove packing from the bottom of the motor
- Place the machine at the site at which it is to be Installed, and put the rat mesh.
- Remove transit bolts.
- Insert plastic caps provided into holes vacated and press till they click into place.
- Keep transit bolts carefully. They will be required in case you need to shift the machine again.
- For shifting and re-installation at a new site, please get in touch with our service personnel.
- Keep packaging material carefully. It comes handy while shifting residence.
- PLEASE DO NOT OPERATE THE MACHINE TILL TRANSIT BOLTS HAVE BEEN REMOVED.

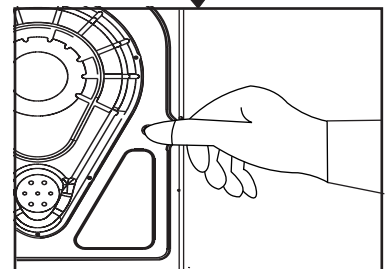

SETTING UP


The machine should be levelled properly on the floor. However, it can be installed on any suitable platform or trolley, as desired. Install machine in a room with adequate ventilation. Avoid a room with no windows. The back of the machine should be at least 4 inches (100 mm) away from the wall.

- Do not place the machine on slanting, uneven, unstable surface.
- Level the machine by using the adjustable screws provided at the bottom for levelling.
- Loosen securing nut. Adjust the screw to change level. Tighten securing nut to ensure that screw is locked into place.
- Make sure that the machine rests on all four feet on a level surface, at all times, to avoid vibrations during operation
- Machine should be leveled again in case it is moved to a new site.
- Machine is provided with ventilating openings on the base. Hence it is always recommended to put the machine on the floor after removing the carpet.
- In countries where there are areas which may be subjected to infestation by cockroaches or other insects etc, pay attention to keep the appliance & surrounding in clean condition at all times any damage which be caused by cockroaches etc will not be covered by the appliance gurantee.

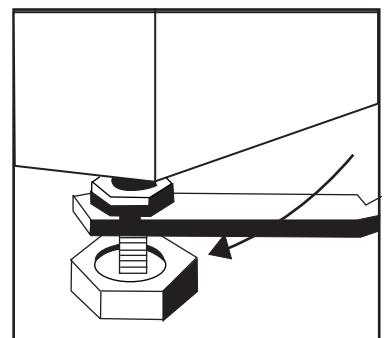


WATER INLET

- Connect inlet hose to water tap/ line.
- Do not connect machine to a hot water supply

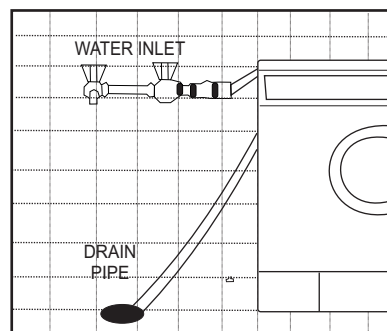



WATER OUTLET

- A drain pump is provided in the machine to pump out used water.
- The end of the outlet should be placed near a drain. If necessary, it can be placed over the sink at a maximum height of 1 meter from the floor level.
- Allow free flow of water from the outlet pipe.

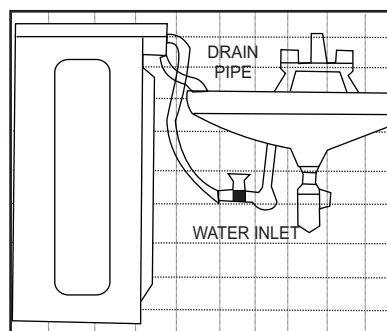

ELECTRICAL CONNECTION


- Check that the electrical line can take the required load.
- Connect to a 230V, 50Hz single phase AC supply. The appliance must be positioned so that the plug is accessible.
- Machine must be earthed properly before operation. This can be done by using a 3 - pin plug and a properly earthed operated socket of 16 Ampere rating.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. It should not be stretched when connected to the main circuit.
- Use of extension cord not recommended since it may not be properly earthed.
- Use ISI marked sockets of reputed make for preventing loose contact of power supply cable.
- Ensure that there is a firm connection between the 3 PIN PLUG and SOCKET, else it may result in sparking and subsequent failure of 3 pin plug.
- Ensure that L,N,E is as per the Fig. Shown
- Washing machine should always be connected to socket with 16 Amps MCB or other automatic short circuit protection devices.

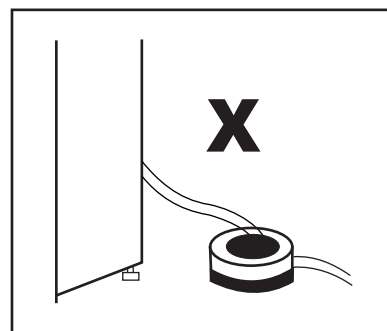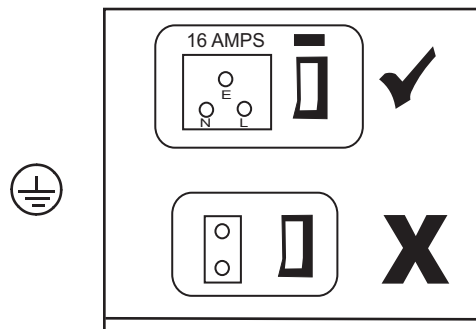

CAUTION :- The producer/Manufacturer declines any responsibility for damage caused by failure to observe this rule. You are therefore advised to check that your household supply has an efficient earth.

CONTROL PANEL

Let's take a look at the control panel and understand the working of each of its features. Each feature serves a specific purpose in the complete operation of the machine.

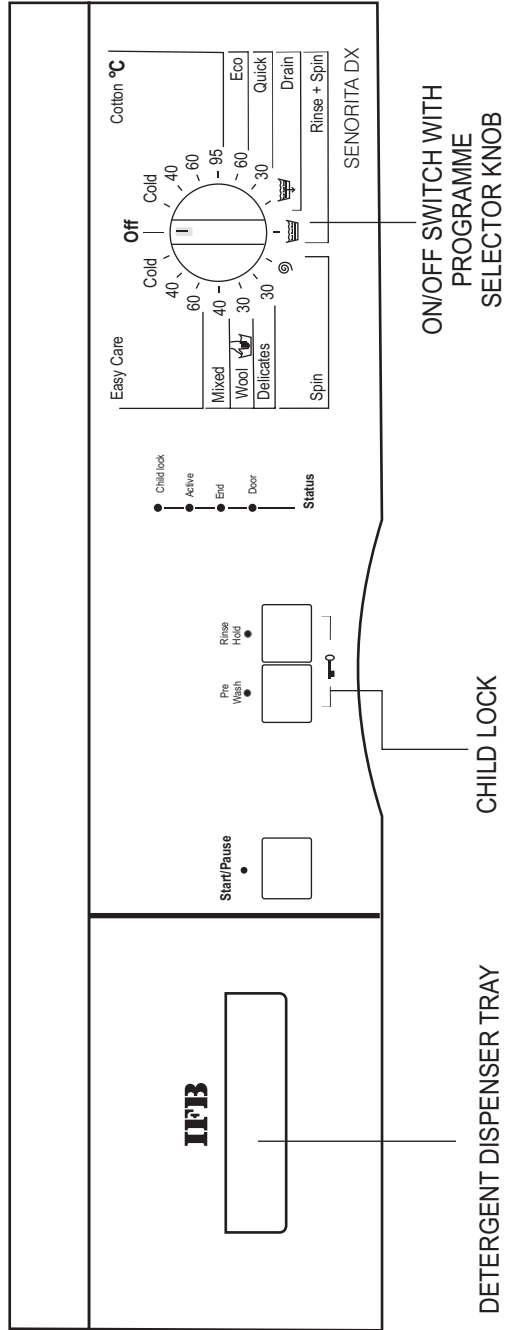

ENVIRONMENTAL PROTECTION/ CONSERVATION ISSUES

Your washing machine uses water, energy and detergent efficiently, thereby protecting the environment and reducing your household costs.

Using your washing machine in an efficient and environmentally friendly manner:

Do not exceed recommended load.

Cottons	5.5kg
Easy-care	3.0kg
Delicates and Woollens	2.0kg

Where possible, use the 60° C Eco program instead of the 95° C Cottons program. The extended washing time achieves a cleaning result comparable to the 95° C program, but uses considerably less energy.

Avoid using the Prewash program when washing lightly to normally soiled laundry.

Add detergent according to the degree of soiling, amount of laundry and water hardness, and observe the detergent manufacturer's instructions.

BEFORE USING YOUR WASHING MACHINE FOR THE FIRST TIME

Caution

The washing machine must have been installed and connected properly (refer page 7)

Your appliance was tested before leaving the factory. To remove any water left over from testing procedures, the first washing cycle should be carried out without laundry in the machine.

Do not load any laundry.


1. Turn on water tap.
2. Pull out the detergent dispenser up to the end stop.
3. Pour approx. 1 litre of water into chamber II of the detergent dispenser.
4. Pour ½ measuring beaker of detergent into dispenser II. Do not use any special detergents for delicates or woollens (excessive foam).
5. Close the detergent dispenser.
6. Set the programme selector to 95° C cottons.
7. Press the Start button. Door LED will glow Red once the door is locked.
8. When the End LED glows, Turn the programme selector to Off.

USING YOUR MACHINE

PROGRAM SELECTOR

- The program selector is used to choose the desired program. The knob can be rotated in both clockwise and anti-clockwise directions. The knob should be rotated slowly one step at a time.
- A choice of 15 basic programs is available according to the fabric being washed and extent of soilage. For more details please refer the topic “Kinds of wash programs”.
- Program selection should be done before pressing the “Start/Pause” button.

Attention: To choose a different program during program run of the machine, switch off the machine, wait for few seconds and then select a new program.

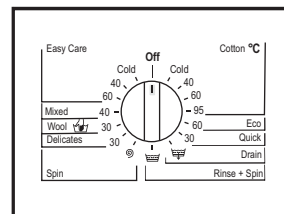


OPTIONAL BUTTONS

- The program selected can be further supplemented by choosing the various options available as listed below
- After the machine is powered on, available options to a program will be shown by flashing of the corresponding led of the optional button. non flashing led's refer to non applicable options to that program. default selected options/selected option will be indicated by the glowing of the led.
- With the selection of optional buttons, the total time required for washing is automatically readjusted
- Start / Pause LED (Dual colour) will flash Green before program start, and will glow Red when program started and will switch off at the end of the program and will flash red in pause mode.


PRE WASH OPTION

- If pre wash option is selected, the clothes are given a preliminary wash before the main wash.
- Useful for the Cotton / Synthetic clothes which are highly soiled, stained, long wearing like outdoor sports wear, kitchen wear, jeans etc.
- When chosen, the detergent is to be filled in compartment marked I of the detergent dispenser tray.
- At the end of the Prewash, the dirty water is pumped out automatically.
- Prewash can be selected by pressing this button. Led glowing is an indication that the option is selected.

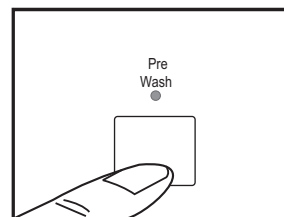

RINSE HOLD

- If the clothes are left unattended after final spin for a long time it will increase the creases on the clothes.
- In order to minimize the creases, Rinse hold option has to be selected which will prevent clothes from creasing by holding them in water before final spin.
- At rinse hold step LED will flash
- During the Rinse hold stage, the programm will halt start pause red LED will flash & active LED will glow.

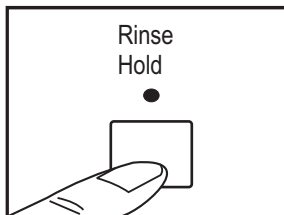


SPIN SPEED


Program	Max. Spin Speed (RPM)
Cotton, Eco, Quickwash, Easy care, Rinse+Spin	800
Spin	800
Delicate, Wool	600

START/PAUSE

- **At power on start Start/Pause Led will flash green indicating that the program has not started.** After choosing the desired program and options, press this button to start the program. **Start/Pause Led will glow red to indicate that the program has started.**
- Press Start/ Pause button once to enter pause state, **Start/Pause Led will flash red in pause mode.**
- To change the program during the machine run, **Press Pause button → Switch OFF the machine → Switch ON → Select a new program.**
- To select / deselect the options during the program run, **Press Pause button → Change the options → Press Start button.**
- Pause mode is indicated by the flashing of start pause red LED
- **At the end of the program, Start/Pause Led will go off.**

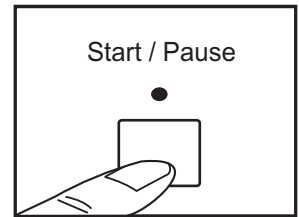


DOOR Indication

- **Glows Red when door is locked**
- **Flashes Red if door opening option is available. wait till it glows Green.** 
- **Door can be opened only when the door Led glows Green.**

NOTE: Addition of load after starting the program.

1. To open the door during program run, pause the machine. Door Led will flash Red only if door opening is available, if not it will glow red. The door will get opened after a delay of 1 - 2 minutes. Door Led will glow Green.
2. To prevent any untoward incidents to you, additional protection is provided in which the **door cannot be opened even if paused when the water temperature in the drum is above 60°C or if the water level inside the drum is high or if the washing machine is in spinning operation.**

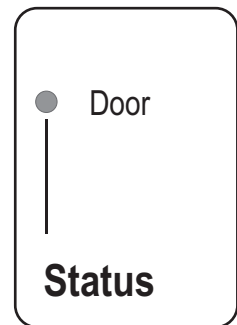


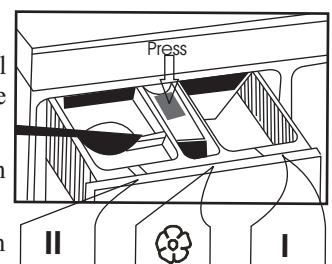
CHILD LOCK SAFETY PROVISION

- You can safeguard your washing machine to prevent any unintentional changes to the selected options and to the program sequence by activating Child lock feature.
- To activate “Child lock” feature press “Prewash/” and “rinse hold” buttons simultaneously. for about 3 sec. Child lock can be activated only after starting the program.
- Child lock feature makes all the functional buttons inoperative. **When childlock is activated childlock led will glow**
- To deactivate the child lock, press the same two buttons simultaneously for about 3sec. child lock LED will go OFF
- **If child lock is opted, it has to be disabled to Pause and make any changes in the options during program run, or after end of the program for opening the door.**

AUTOMATIC DETERGENT DISPENSER TRAY

Designed for automatic dispensing of detergent & additives as required which avoids manual filling at each stage. The detergent dispenser tray should be filled with detergent & additives before the start of a program. The tray has three chambers

1. Pre wash chamber: (Marked -I) To be filled with detergent in case a pre wash program has been chosen.
2. Main wash chamber: (Marked -II) To be filled with detergent for every wash program.
3. Fabric conditioner additive chamber: (Marked “) To be used for additives only. It should be filled as per instructions mentioned in the topic “operation”.



The detergent tray must be pulled out, filled as required and shut before the machine is switched ON

KINDS OF WASH PROGRAMS & OPTIONS AVAILABLE

IFB Digital washing machine provides you number of combination of main programs and options to get wash quality to your satisfaction.

To select the right program, you should know the basic group of wash programs.

1. Cottons - Cold, 40, 60, 95.

- The washing action is more vigorous/gentle for a longer duration to clean clothes better.
- To be used for whites, cottons and coloreds, average soiled cottons, bed sheets, curtains, under garments, towels, shirts, trousers etc.
- Not to be used for Woolens and Delicate fabrics.

Selectable additional options:

Pre wash option, Rinse Hold.

2. Eco Wash - 60° C

- This gives an environmental friendly and energy saving operation of washing.
- In this program, high mechanical tumbling action and extended washing time gives a cleaning result comparable to that of 95deg. Program but uses considerably less energy.
- This program to be used only for washing stained, heavily soiled Cotton clothes such as whites, and coloreds, bed sheets, shirts, trousers.

Selectable additional options:

Rinse Hold.

3. Quick Wash - 30° C

- Useful for washing the laundry which is very lightly soiled like once worn/ daily wear garments.

Selectable additional options:


Rinse Hold.

4. Delicates - 30° C

- The washing action is less vigorous/gentle for a shorter duration.
- To be used for washing sensitive easy care fabrics like skirts, blouses, shirts, net curtains, mixed fibre fabrics or Turkish towels.

Selectable additional options:

Rinse Hold.

5. Wool - 30° C 

- The washing action is very gentle for a short duration.
- Most suitable for washing hand washable fabrics or machine washable fabrics made from wool or wool blend.

Selectable additional options:

Rinse Hold.

6. Mixed 40° C

Different types of fabric can be washed together

Selectable additional options:

Pre wash option, Rinse Hold.

7. Easy Care60/40, Easy Care Cold

- The washing action is less vigorous/gentle for a shorter duration.
- To be used for easy care fabrics made from Cotton, Synthetics, lightly soiled blouses, shirts etc made of polyester or similar blends.

Selectable additional options:

Pre wash option, Rinse Hold.

EXCLUSIVE PROGRAMS

1. Drain

- This program is used for draining out the water from the washing machine or squeezing out water from hand washed/rinsed items.

2. Spin : use to dry your clothes.

3. Rinse + Spin

- Exclusive rinse cycles with subsequent spin cycle and suitable for rinsing hand-washed items.
- Maximum spin speed is 800 rpm (by default)


Selectable additional options:

Rinse hold, No final spin

EXCLUSIVE IN-BUILT FEATURES:

A UNIQUE SHOWER SYSTEM:

Scoops on the inner drum pick up water and shower through perforated fins on the laundry as the drum rotates. This ensures a thorough wetting of the laundry, What's more, the process requires less water and thus less energy to heat it.

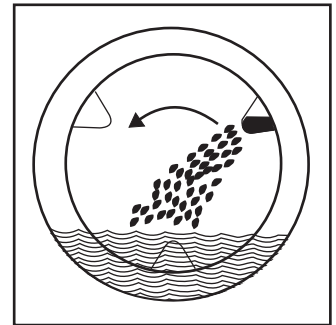

COOLDOWN CYCLE:

Hot water drained after main wash cycle can be harmful for people and environment. Hot water is cooled down by taking additional cold water automatically, which also reduces the concentration of detergent, thus ensuring better rinsing efficiency and Eco friendly environment. The cool down cycle takes place only if the temperature of water inside the washing machine is high thus saving water.

UNBALANCE DETECTION & CORRECTION:

If the wash load is very unevenly distributed, the washing machine will try to distribute for balancing the load inside the drum. In this process, the washing machine will stop in between and try to distribute the load. Some times the washing machine will spin at lower spin speeds or no spin for safety reasons and to reduce stresses on the dynamic parts of washing machine. This in turn will increase the life of the mechanical components of washing machine. program duration may vary under such conditions.

BUILT IN MEMORY:

The washing machine has an inbuilt memory thus ensuring the machine will start from the same point where it had stopped, on resumption of power supply,excluding certain steps where redistribution of clothes is necessary.

PROGRAMME CHART

Programme	Maximum load (kg)	Programme* duration (min)	Water**(minimum) consumption (litres)
Cotton Cold	5.5 kg. Max	104	57
Cotton 40°C	"	107	57
Cotton 60°C	"	122	57
Cotton 95°C	"	133	57
Eco - 60°C**	"	131	48
Quick Wash - 30°C	2 kg. Max.	44	42
Easycare Cold	3 kg. Max.	96	64
Easycare Mild - 40°C	"	99	64
Easycare 60°C	"	114	64
Delicate 30°C	2 kg. Max	39	53
Mixed - 40°C	3 kg. Max	105	64
Wool 30°C	2 kg. Max	39	49
Rinse + Spin	-	35	34
Drain	-	2	-
Spin	-	15	-


* - Depending on the water pressure, water hardness, water inlet temperature, quantity and type of textile, detergent used, degree of soilage, ambient condition, selected additional function & power supply fluctuations the actual values given on or with the machine can deviate from the declared standard values, as they are tested according to the laboratory conditions. water consumption excludes the quantity of water taken during cool down cycle.

Water consumption excludes the quantity of water taken during cool down cycle of cotton 95 program.

**Programme setting for test in accordance or in conformity with EN 60456 and IEC 60456(with soak option)



SORTING OF GARMENTS

- Only machine washable fabrics should be washed in the machine (look for wash symbols given on your garments).
- Sort garments as per the darkness or intensity of colours. Lighter garments can pick up dyes from darker ones.
- Separate Man-made fabrics (like polyester) from natural fibres (cotton). Man-made fibres can attract the oils that are released from natural fibres during washing. These oils can build up and make spots more noticeable.
- Wash heavily soiled, dirty items separately from slightly soiled items. This will retain the brightness of colours of fabrics washed.
- Try to have a mix of large & small clothes in each wash load. This will move the clothes freely in the drum during the wash cycle thus ensuring better wash.
- Sort delicate fabrics and loose knits from 'tougher' fabrics.
- Garments which give lint (e.g. woolens, socks, coarse cotton fabrics, etc) should be washed separately from garments that attract lint (e.g. synthetic fibres and corduroys).
- Check the pockets for any loose items like coins, keys, keychains, etc. Remove these articles as these can damage the drum/tub of washing machine.
- Wash woolens and silk only if label on garment permits it.

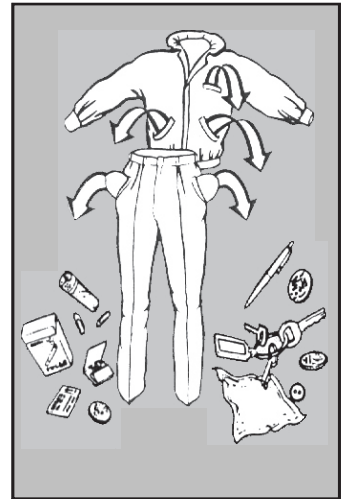

LOADING THE MACHINE


- Open the front porthole door, place garments loosely inside the drum. For best results load garments one by one.
- A wash load should preferably be a mix of large and small clothes.
- Turn knitted garments inside out. Remove loose hooks, rings and pins found on curtains etc.
- If pins/hooks cannot be removed tie a knot around them with the garment itself.
- **Close door and press till you hear a 'click'. Ensure that no cloth is jammed between door and rubber gasket .**
- For large garments like bed covers and curtains etc. open out the garments and hold from the centre to load.
- Ensure that volume of load allows the clothes to tumble freely in the drum for best wash results.
- **Over- loading the drum will affect wash quality. It can also damage the machine and clothes in the long run.**
- **Running the machine under - loaded may cause excessive vibration, noise and damage.**

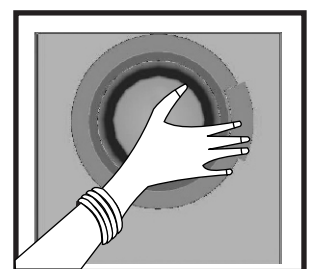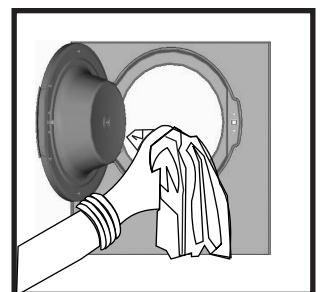

DETERGENT TO BE USED AND QUANTITY

- The best washing results will be achieved by using the correct dosage of detergent .
- Use the detergent as per the instructions on the detergent packaging, However the dosage need to be adjusted during usage to avoid effects of inadequate/excess detergent as mentioned below.
- The quantity of detergent to be used will depend on
 - a. Quantity of clothes being washed
 - b. Degree of soilage of clothes
 - c. Water hardness
- Hard water and heavily soiled clothes require more, while less soiled clothes requires less than recommended quantity of detergents.
- Do not use dry cleaning agents.
- Frequent use of insufficient detergent will be noticeable as follows:
 - a. Washing appears grey or not properly clean
 - b. Grey/brown stains appear on the clothes
 - **Only use Detergent recommended for front loading washing machines.**
- Excess use of detergent or not recommended detergent will result in
 - a. Higher environmental pollution
 - b. Generation of too much foam which may result in:-
 - Building up of scales
 - Poor rinse quality
 - Less drying efficiency
 - Reduction in life of the Components.
 - More vibrations.

FABRIC CONDITIONER


- Fabric softener, Whitening, Enzyme, Disinfectants, Bleaching, etc.
- Fill in the middle chamber of detergent dispenser tray marked  not exceeding the level marked “Max”
- Conditioner should be in liquid/solution form only (powders to be mixed in water)
- Fabric softener gives a soft feel and smooth surface to fabrics.
- Whitener gives ‘Whiteness’ to white clothes and brightness to coloured clothes.
- Enzymes help to remove stains of sweat, blood etc.
- Chlorine bleach is used for white clothes and oxygen bleach is used for coloured clothes.
- A strong bleaching agent is not recommended for direct use in the washing machine.
- Extremely dirty areas in clothes can be pretreated with bleach and then to be loaded in the machine for a regular wash.

TREATMENT OF STAINS

- Stains need to be treated immediately while they are fresh. Usually stains are categorized as absorbed stains, buildup stains, and compound stains.
- Absorbed stains can be removed by rubbing gently a pad containing a suitable solvent over the stain from outer edge towards centre by keeping stained cloth on absorbent fabric.
- Built up and compound stains may be removed by first carefully brushing off stained area. Then rub gently with pad containing solvent from the back of fabric.
- It is advisable to try out the solvent on hidden part of the garment to verify its effect on clothes.

FABRIC CARE SYMBOLS

WASHING SYMBOLS

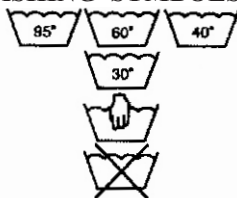

WASH TEMP MAX·C

95, 60, 40

30

Do not machine -wash

Do not wash in water

ACTION

Normal





Gentle

Handwash

OPERATION





IRONING

The number of dots indicate the maximum recommended temperature.

	Max 200° C,
	Max 150° C,
	Max 110° C,
	Non-iron



DRY CLEANING

A circle symbolizes dry cleaning.

	articles normal for dry cleaning in all solvents.
	articles normal for dry cleaning in perchloroethylene, white spirit, Solvent 113 and Solvent 11
	article normal for dry cleaning in fluorocarbon 113 or white spirit.
	do not dry clean.



BLEACHING

A triangle symbolizes dry bleaching

	bleaching
	do not bleach

DRYING

A rectangle symbolizes drying

	suitable for tumble-drying
	do not tumble-dry

WOOL



Garments labeled as "Hand Washable" can be washed in the wool wash cycle.

CLOTH WEIGHTS

Sheets :		Pajamas Kurtas:	400 gms	Napkins (1 doz)	1.1 kg
Cotton (double)	1kg			Lungi / Dhoti	200 gms
Cotton (single)	500 gms	Shirts:			
		Cotton	280 gms	Bedspread	3 kg
Other than		Others	200 gms	Blankets	
Cotton (double)	650 gms			Wool	2.0 kg
Cotton (single)	400 gms	Blouses:		Acrylic	1.5 kg
		Cotton	140 gms		
Pillow Slips :		Others	100 gms	Sweaters (wool)	400 gms
Cotton	110 gms			Other heavy weight	300 gms
Others	85 gms	Sarees:		Light weight	150 gms
		Cotton	650 gms		
Bath Towels	600 gms	Synthetics	350 gms	Cotton vests	100 gms
Hand Towels	250 gms	Panties	60 gms	Underslips	100 gms
Tablecloths:		Socks:		Skirts	200 gms
Small	230 gms	Long (2 pairs)	150 gms	Trousers	250 gms
Large	600 gms	Short (2 pairs)	85 gms	Jeans	400 gms
Table Napkins (4)	150 gms	Hankies (6)	85 gms		

- The chart indicates the average weight of clothes.
- The recommended weight of your wash should not be exceeded to ensure that your machine gives your clothes an effective wash.

CHECK POINTS: Before switching your machine 'ON' check if

- The power supply plug is connected to a 230 V, 50 Hz supply with good earthing.
- The water inlet stopcock is fully open.
- The inlet and exhaust hoses are straight and free from twist.
- The coin trap is closed firmly and exhaust pipe is connected to drain.

PROGRAMMING THE MACHINE:

1. Switch ON the mains supply.
2. Rotate the programmer knob to the desired program.
3. Select the options preferred for the chosen program from the flashing options. **After selection, the Led of the chosen options will glow.**

The chosen options can be deselected by pressing the button again.

Non-flashing options indicate that they are not applicable for the corresponding program.

4. Open the door and load the clothes inside the drum.
5. Put the detergent in the respective chamber.
6. Press the "Start/Pause" button to start the washing cycle. Flashing of optional button Led will turn OFF.
Door led will flash green & will glow red once the door is locked. status Led's will glow depending on the phase of the program.
7. If required enable the 'Child lock' feature to prevent any tampering of program.
8. To change the options, **Pause the machine → Select / Deselect the options → Press Start button.** The machine will acknowledge the changes done automatically.
9. To change / cancel the program during the machine run, **Press Pause button → Switch OFF the machine → Switch ON → Select a new program**
10. Washing, Soaking, Rinsing & Spinning can be seen through the porthole door.

MACHINE STATUS INDICATION:


- Door led will glow/Flash indicating the status of the door
- During error mode the error codes will be indicated

WHEN THE PROGRAM HAS ENDED:

- At the end of the program "End" LED will glow.
- Door LED will **Glow Green** at the end of the program.
- Start/Pause LED will switch off at the end of the Program
- **Open the door by pulling the door handle to remove the clothes from the machine only after the door LED glows green.**
- Switch OFF the machine by rotating the program selector knob to "OFF" position.
- Leave door slightly ajar between washes to dry out the inside of the machine, to preserve the door seal..


COIN TRAP

1

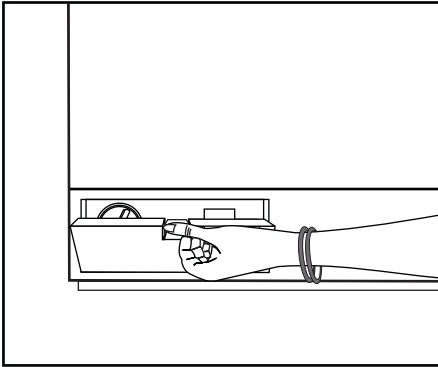

Open the detachable bottom door by pressing the top portion of it.

2

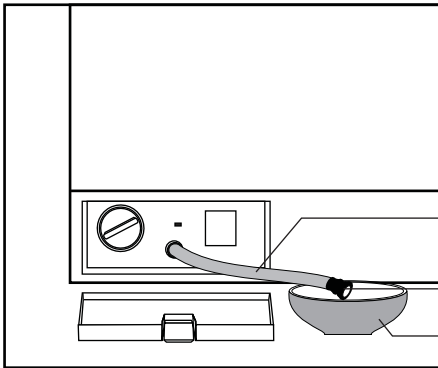


Drain hose

Drain plug

Container

Place a shallow container near the bottom door. Pull out the drain hose and open the drain plug to drain out the water from the machine in the container.

3

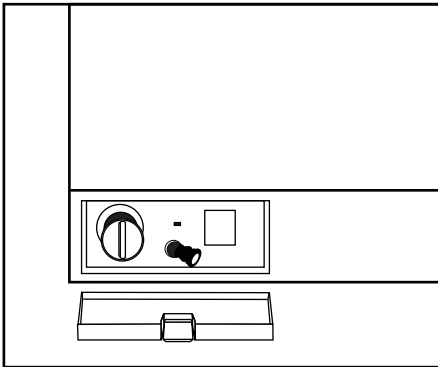

After draining out the water through the drain plug, open the coin trap by rotating in anti-clockwise direction and remove the foreign particles like coins, pins, hooks, present if any. Tighten the coin trap and drain plug to their original positions and close the bottom door.

- 4 BEFORE USING THE MACHINE AGAIN, RUN THE MACHINE WITHOUT CLOTHES AND DETERGENT BY SELECTING ANY SHORT WASH PROGRAMME. THIS WILL ENSURE THAT THE WATER SYSTEM LINE GETS FILLED WITH WATER.


ALTERNATELY POUR TWO MUGS OF WATER (APPROX. 1.5 LITRES.) DIRECTLY INTO THE DRUM.

DO NOT OPEN THE COIN TRAP DURING A PROGRAMME RUN.

DRUM

Rust Stains




Never leave metal items e.g. paper clips, safety pins etc. in the drum as it creates superficial rust marks on drum. If there are any rust stains remove with a non-chlorine agent. Special non-metal sponges (never use steel wool) may also be used.

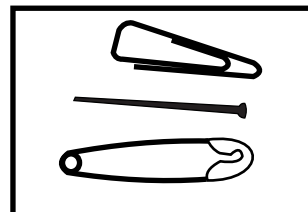

SIEVES

Cleaning of water connection sieves, filter:

- Turn off Taps. Disconnect power supply to the machine. Unscrew inlet hose from machine as well as from the tap and drain out water from the hose.
- Pull the sieve out of the magnetic valve with a pair of flat nosed pliers and clean under running water with a brush.
- Fit sieve back to the valve.
- Remove the filter mesh from the tap end of the inlet hose and clean under running water with a brush.
- Fit the filter mesh back to inlet hose.
- Screw inlet hose back to the machine and the tap. Ensure that both the sieves and filter are in place.
- Turn on the tap.

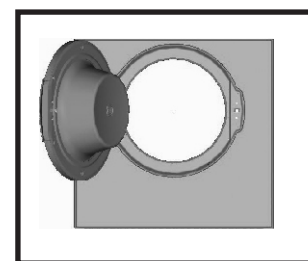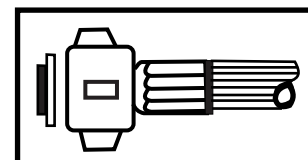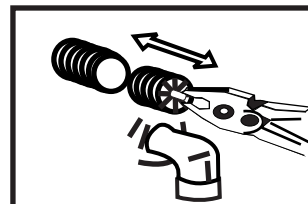

Cleaning of Porthole Door Area:


- After every wash clean vapour off porthole door.
- Lift the fold in the rubber gasket under porthole periodically to remove lint and dirt preferably after every wash.

FROST PROTECTION

- If the machine is being operated in very cold temperature, all the water should be drained out after use.
- Locate the drain hose and drain the water.
- Disconnect inlet hose from the tap and drain.

DRAINING DURING EMERGENCIES

- In case of a long power failure during a programme run, the water can be drained from the drum through the drain hose
- Allow the water in the machine to cool down sufficiently.
- Locate the drain hose and pull out the drain plug to drain water in a large shallow container.
- Before restarting the machine, ensure that drain plug is fixed to the drain hose properly and coin trap water line is filled with water by running the machine without any clothes or detergent.
- Spillage of water can rust the base plate. Draining through drain hose prevents rusting.

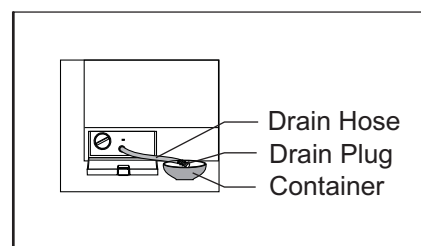

WHY DOES IT HAPPEN ?

WASHING MACHINE DOOR DOES NOT OPEN

- Check if the program is active.
- Check if the door **Green** led is glowing. check if the child lock is active
- For reasons of safety, the washing machine door cannot be opened when the water level, temperature or the speed is too high

MACHINE DOES NOT START

- Check if the machine is powered ON.
- Check if the “Start/Pause” button is ON .
- Check water supply.
- Porthole door not closed properly.

WATER DOES NOT ENTER MACHINE/DETERGENT NOT BEING FLUSHED INTO DRUM

- Check water supply
- Porthole door not firmly closed
- Water tap not turned on
- Bent inlet hose
- Sieve on inlet valve/ inlet hose clogged.

SUDS ESCAPING FROM DETERGENT DISPENSER TRAY/ EXCESSIVE FOAM IN THE DRUM.

- Detergent used is not a washing machine detergent
- Excessive detergent used

WATER LEAKAGE FROM THE MACHINE

- Inlet/Outlet hose connection loose
- Coin trap not screwed on properly
- Inlet hose leaking

MACHINE DOES NOT DRAIN

- Coin trap clogged
- Outlet hose end above 1 meter. from floor level

MACHINE DOES NOT SPIN/ CLOTHES REMAIN WET.

- Rinse Hold option is selected
- Coin trap is clogged.
- **Unblanced load (Divide the load in two halves and spin each load using exclusive spin program with desired spin speed or add smaller articles of laundry to balance the load & repeat the spin cycle.)**
- **Excessive detergent / Foam**
- **Load is too small.**

MACHINE VIBRATES MORE DURING SPINNING

- Machine not leveled properly
- Coin trap clogged partially.
- Clothes not loaded as instructed/ unblanced load.

MOTOR NOISE

- It is normal for noises to be heard while motor is running. However wash load, belt tension and motor mounting bolt should be checked for specified limits.

PUMP NOISE

- It is normal for noises to be heard from the pump during the start-up and final stage of draining. However check for fluff filter clogging.

PROGRAM CYCLE TIME DELAYED

- Not a fault
- It is normal as the washing time may vary depending upon the type and quantity of laundry, inlet water pressure, inlet water temperature, variations in power supply and other usage conditions.
- **If there is unblanced load the machine may make several attempts to redistribute the clothes inorder to minimize the vibrations resulting in extended program duration.**

DISPLAY MESSAGE INTERPRETATION

	POSSIBLE CAUSE	SOLUTION
Active status led flashing & door green led glowing	Door is not closed properly	Open and then close the door properly
Active status led flashing & door red led glowing (program Completed)		Switch Off the machine and call service personel.Do not try to open the door forcibly
Active status led flashing & door red led glowing (During wash / Rinse - Program Incomplete)	Water tap turned off Water supply not available Sieve / filter blocked in water inlet hose. Water pressure too low Bent/damaged Water inlet hose Leakage from the machine/Air trap tube	Turn the water tap ON. Machine will start automatically on resumption of water supply. Clean Sieve/Filter (Refer Page 20 for details) Eliminate Cause. Remove bend / damage contact service personel
Active status led & End led flashing continously, door LED glowing		Switch OFF the machine and Contact service personel.

SAFETY PRECAUTION

- ☞ Ensure that the machine is properly balanced on four adjustable feet.
 - ☞ Ensure that the machine is connected to 3 pin socket with good earth and 16 Amp MCB or other automatic short circuit protection devices.
 - ☞ The machine is tested with water during assembly for performance checking. Condensed droplets of water may remain inside the drum. It is advisable to run the machine without wash load in cotton 60 program with detergent for the first time after installation.
 - ☞ Programme / temperature selection must be done prior to pressing the “Start/Pause” Button. For altering/modifying the options, the press “Start/Pause” button again to bring the machine in “Pause” mode. Modify the option and restart the washing machine by pressing “Start/Pause” button.
 - ☞ Servicing should be handled by the Company’s authorized personnel only.
 - ☞ Check label on garments for determining conditions under which fabrics are to be washed.
 - ☞ Use detergent recommended for washing machine.
 - ☞ Ensure that the electrical line on which the machine is used can take the required load.
 - ☞ Check the inside of drum before loading the clothes.
 - ☞ Protect the machine from direct sunlight and do not splash water on it. Clean with a damp cloth.
 - ☞ Keep your machine dry to avoid corrosion/rusting. Take special care to wipe the machine after cleaning the Coin trap.
 - ☞ The machine should ideally be installed on the floor. It can be installed on any suitable platform or trolley, if desired by the customer.
 - ☞ Clean the shell lower and detergent tray periodically by taking out the detergent tray.
 - ☞ Do not pull the cord to disconnect the plug. Hold the plug itself/do not insert or remove the plug with damp hand.
 - ☞ Do not drag the washing machine to its position. Always lift the or move the machine keeping the wheel’s direction in mind.
 - ☞ Do not move the washing machine if it contains the wash load or when in operation.
 - ☞ Do not install the machine in a damp area or bathroom, with exposure to direct shower*.
 - ☞ Do not spill water over the machine*. In case of spillage, wipe dry.
 - ☞ Avoid the machine coming in contact with floor cleaning chemicals.*
 - ☞ Do not wash or spray water over the switch or control panel.
 - ☞ Do not allow children/pets to play with the machine.
 - ☞ Do not wash shoes or utensils in the machine.
 - ☞ Keep machine away from fire or heat.
 - ☞ IFB will not be responsible if the user uses accessories not manufactured or recommended by IFB.
 - ☞ Take care when draining hot washing solution.
 - ☞ Door always become very hot during washing at higher temperatures. Keep children away from the appliance while it is in use.
- *Exposure can lead to rusting/corrosion.

SPECIAL NOTE:

ONLY USE A DETERGENT RECOMMENDED FOR FRONT LOADING WASHING MACHINES. A DETERGENT WHICH FOAMS EXCESSIVELY CAN DAMAGE THE MOTOR AND DETERIORATE THE RINSE QUALITY.

INSTALL MACHINE IN A ROOM WITH ADEQUATE VENTILATION. AVOID A ROOM WITH NO WINDOWS. THE BACK OF THE MACHINE SHOULD BE AT LEAST 4 INCHES(100 mm) AWAY FROM THE WALL.

IF YOU USE A COVER OR TABLE CLOTH ON THE TOP LID, MAKE SURE THAT THE VENTILATION SLOTS AT THE BACK ARE NOT COVERED OR BLOCKED. THIS PRECAUTION WILL PROLONG THE LIFE OF ELECTRICAL AND RUBBER COMPONENTS.

Dimensions (D x W x H)	:	56 cm x 60 cm x 85 cm
Net Weight	:	67 Kg.
Capacity	:	5.5 Kg of dry clothes (cotton)*
Programmes	:	44
Selector Buttons	:	Prewash ,Rinse Hold , start/pause
Spin Speed	:	800 rpm
Heater Rating	:	1.9 kW
Drum	:	Stainless Steel
Temperature Selection	:	Cold to 95°C
Drain Pump Rating	:	30 Watts
** Power Consumption	:	0.2 unit for cotton cold ,0.95kw for Eco60
Connected Load	:	2.35 kW Max.
Programme duration	:	40 to 120 minutes
Power Supply	:	220 - 240 V, single phase, 50 Hz
Water Pressure	:	1 bar (1.03 kg/cm ²) - 10 bar (10.3 kg/cm ²)

Specifications are subject to change without Prior notice.

* Capacity depends on size, texture and combination of clothes

** Depending on the water pressure, water hardness, water inlet temperature, quantity and type of textile, detergent used, degree of soilage, ambient condition, selected additional function & power supply fluctuations the actual values given on or with the machine can deviate from the declared standard values, as they are tested according to the laboratory conditions.

WARRANTY

CUSTOMER COPY

MODEL WE SENORITA DX SR. NO. WT SENDX B _____

DEALER'S NAME: _____

DATE OF PURCHASE _____

CUSTOMER'S NAME _____

ADDRESS _____

TEL. NO. (Resi.) _____ (Off.) _____

E-mail _____

MOTOR SR. NO. _____

INSTALLATION REPORT

IFB WASHING MACHINE

Model : _____ Serial No. : _____

Customer's Name : _____

Tel. No. _____ Address : _____



Installation Check Points

Machine Delivered on : _____ Machine Installed on : _____

- | | | | | |
|--|-----|--------------------------|----|--------------------------|
| 1. Any major transit damage to the machine observed | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 2. Condition of Earthing/Plug Point (16 Amp. 230V AC with MCB or other automatic short circuit protection devices.) good | | | | |
| If poor, customer has been advised, to correct the same. | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 3. User Manual Delivered | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 4. Inform user of need to keep drain hose straight & maximum height of draining. | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 5. Warranty term explained | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 6. Machine levelling procedure & importance explained | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 7. Detergents and bleach recommendation revent DD tray chambers explained | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 8. Basic wash demo given | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 9. Trouble shooting explained | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 10. Check following for proper order : | | | | |
| a. Inlet Hose | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| b. DD Tray | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| c. Ratmesh fitted. (If applicable) | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| d. Drain hose | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 11. Do's and Don't's explained | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 12. Display function explained (If applicable) | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 13. Procedure for cleaning rubber sleeve / coin trap | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 14. Program selection, Programs & buttons options
(other knobs) explained | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 15. Indicator lamp/Status LED function (if Applicable) | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 16. Buzzer function (if Applicable) | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |

Installed by : _____

Signature : _____

Customer's response

- | | | | | |
|--|------------------|--------------------------|-------------------|--------------------------|
| 1. The installation person was courteous & Helpful. | Yes | <input type="checkbox"/> | No | <input type="checkbox"/> |
| 2. I would describe my experience with installation as | Unacceptable | <input type="checkbox"/> | Satisfactory | <input type="checkbox"/> |
| | Non Satisfactory | <input type="checkbox"/> | Very Satisfactory | <input type="checkbox"/> |

I certify that the above information & checks have been done to my satisfaction & I am fully satisfied with the installation of the washing machine.

Customer's Signature _____

Date : _____ Time : _____

SERVICE STATION COPY

MODEL WE SENORITA DX SR. NO. WT SENDX B _____

DEALER'S NAME: _____

DATE OF PURCHASE _____

CUSTOMER'S NAME _____

ADDRESS _____

TEL. NO. (Resi.) _____ (Off.) _____

E-mail _____

MOTOR SR. NO. _____

INSTALL THE MACHINE, ONLY IF EARTHING IS PROPER

I OWN THE FOLLOWING PRODUCTS: (Please tick in the box)

COLOUR TV REFRIGERATOR AIR CONDITIONER

DISH WASHER MICROWAVE OVEN CLOTHES DRYER

FRANCHISEE ATTACHED: _____

ALSO FROM IFB



DISHWASHER
CAPACITY:- 12 PLACE SETTING



MICROWAVE OVEN
CAPACITY - 17 to 30 LITERS



CLOTHES DRYER
CAPACITY - 5.5KG

IFB

Customer Care

Dial

1860 425 5678 - BSNL & MTNL Callers

3900 4321 - Other Callers

or email

customerservice@ifbglobal.com

IFB Industries Limited, Plot No. IND - 5, Sector - 1, East Calcutta Township, Calcutta - 700 078
Visit us at www.ifbappliances.com